



## **Quick Set-Up Method for Programming your Remote**

**Step 1:** Turn on the component you want to program. To program your TV, turn on the TV

**Step 2:** While pointing the remote at the TV, press and hold the TV button for 5 seconds **and** the select/ok button until the TV button on the remote is a solid red. Enter your 3 digit code (see reverse side of sheet) while continuing to point the remote at the TV. If the TV shuts off, then it is the correct code. (Move to step 3) If not, once the TV light on the remote is solid red again (you won't have to do anything), it will come back solid if the first code you entered is not correct, then enter the next code on the list and so on until the TV shuts off.

**Step 3:** Press the TV button when the TV shuts off and it will store the code. Hit the power button and the TV button and it will turn on your TV. If not, try again or call in and a technician would be more than happy to walk you thru the process. 386-4141

If programming something other than a TV, the process is the same, just use the appropriate button on the remote you are wanting to program. Example: AUX, DVD

## TV CODES:

HITACHI: 011, 007, 009,  
010, 012, 023, 075, 158,  
072, 363, 587, 613, 670

LG: 363, 102, 106, 112,  
569, 648

MAGNAVOX: 164, 059,  
197, 003, 060, 061, 063,  
064, 022, 094, 226,  
390,363, 467, 431, 333

MITSUBISHI: 124, 109,  
024, 028, 040, 042, 146,  
191, 363, 450, 658

PANASONIC: 080, 034,  
056, 164, 208, 552, 524,  
607, 664

PHILIPS: 164, 005, 093,  
038, 197,003,059, 206,  
431,363, 333, 594, 629

SAMSUNG: 258, 050,  
089, 105, 228, 229, 363,  
333, 515, 655

SANYO: 007, 020, 053,  
057, 082, 187, 657

SONY: 001, 185, 085,  
608, 646, 651

TOSHIBA: 138, 030, 007,  
040, 062, 325, 258

VIZIO: 386, 387, 624, 625,  
675

If your brand of TV is not  
listed, please call into  
Jefferson Telecom and we  
can look it up for you.

Thank You